

# trouble SHOOTING

Honeycomb Electric Blind  
with Guidewires



### **Adjusting Limits – For SonaSky**

- 1.) With blind powered bring the blind to the most closed position.
- 2.) On the remote Press UP & DOWN at the same time until the blind jogs once (1 jog = 1 forward & backward motion)
- 3.) Press the DOWN button until the travelling bar hits the fixed rail.
- 4.) Once the travelling bar has fully closed, allow an additional 5 seconds run on time.
- 5.) Press and hold the MY button for 1 jog (1 jog = 1 forward & backward motion).
- 6.) New limit now set.

# First you need to determine if your blind does 1 jog, 2 jogs or 3 jogs when it is powered on

## Plug in Power Supply –

1 JOG = LIMIT & REMOTE SET **\*(If the blind does this please see instruction 1)**

2 JOGS = LIMITS SET BUT NO REMOTE SET **\*\* (If the blind does this please see instruction 2)**

3 JOGS = NO LIMITS OR REMOTE SET **\*\*\* (If the blind does this please see instruction 3 for SONASKY)**

3 JOGS = NO LIMITS OR REMOTE SET **\*\*\*\* (If the blind does this please see instruction 4 for SONACELL)**

## 1 jog

### \*Pairing Remote Instruction 1 – For all blind types

- 1.) If using a Multi-Channel remote select the exact Channel you wish to assign the Blind to (small red flashing lights at the bottom of the remote) If using a Single Channel remote please ignore this step.
- 2.) Hold the Reset / Programming Button down on the motor/blind for 1 jog (1 jog = 1 forward + 1 backward motion) and then **immediately remove your finger as more jogs will affect the running of the blind.**
- 3.) Press briefly on the small red Reset Button on the reverse of the remote, the Blind will jog once.
- 4.) The Blind has now been paired to that Channel / Remote.
- 5.) Follow the same steps if you have multiple blinds on the same remote or individual channels.

## 2 jogs

### **\*Pairing Remote Instruction 2 – For all blind types**

- 1.) If using a Multi-Channel remote select the exact Channel you wish to assign the Blind to (If using a Single Channel remote please ignore this step).
- 2.) On the remote press 'UP & DOWN' together at the same time, the blind will jog once (1 jog = 1 forward + 1 backward motion).
- 3.) Press briefly on the small red Reset Button on the reverse of the remote, the Blind will jog once.
- 4.) The Blind has now been paired to that Channel / Remote.
- 5.) Follow the same steps if you have multiple blinds on the same remote or individual channels.

## 3 jogs

### \*\*\*Setting Limits & Pairing Remote Instruction 3 – For SONASKY

- 1.) If using a Multi-Channel remote select the exact Channel you wish to assign the Blind to (If using a Single Channel remote please ignore this step).
- 2.) On the remote press 'UP & DOWN' together at the same time, the blind will jog once (1 jog = 1 forward + 1 backward motion).
- 3.) Press the 'Down & MY' button at the same time, this will send the Blind travelling Downwards
- 4.) Once the Travelling Bar has fully closed and hit the Fixed Rail, allow additional 5 seconds run on time and press the 'MY' button on the remote to stop the Blind.
- 5.) Press 'Up & MY' at the same time, this will send the Blind travelling back Upwards.
- 6.) Once the Travelling Bar has travelled approximately 300mm, press the 'MY' button on the Handset to stop the Blind.
- 7.) Press and hold the 'MY' button for 1 jog (1 jog = 1 forward + 1 backward motion).
- 8.) Press briefly on the small red Reset Button on the reverse of the Handset the Blind will jog once.

**At this point both the Remote and the Limit are set.**